

Habitec Security Honeywell Lyric Operating Instructions



- **About Your System:** The Habitec Security Honeywell Lyric security system's burglary protection can be armed or disarmed as needed; while monitoring for environmental, CO, fire, medical, and police emergency conditions 24-hours a day. Most system functions explained below can also be completed from your Total Connect app on your smart phone.
- **False Alarm:** In the event there is a false alarm, please contact Habitec's Central Station immediately at 800-832-5276. Please have your verification password ready.
- **Arming the System (Away/Stay):**
 - Press **Arm Away** or **Arm Stay**
 - Enter your code
 - **Arm Away** will arm the entire system
 - **Arm Stay** will arm the perimeter and leave the motions off

- **Disarming the System:**
 - Enter your code
 - You will hear an entry tone reminding you to disarm the system when you are entering.
 - Upon disarming from the keypad, your Lyric has a built-in camera that will take a snapshot of whomever disarmed the system.

- **Fire/Medical/Police:**
 - Press and hold the **Panic Button** (red round circle with exclamation mark inside) located at the bottom left on the keypad
 - Then push the appropriate icon for help
 - These emergency buttons are active 24 hours a day.

- **Reset Alarm Activation (loud siren):**
 - Press **Disarm**
 - Enter your code
 - **CALL THE CENTRAL STATION**, identify yourself; using your name and password to verify that you are secure and the alarm was accidental.

- **Silent Duress:**
 - Enter 4199 as your disarm code
 - This will turn off the alarm and send in a silent signal to central station telling us you are under duress.

- **Bypassing a Zone:**
 - Press **Zones** in the security menu
 - A list of your zones will appear
 - Faulted zones will appear in red or orange
 - Select the zones to be bypassed, by pressing the up and down arrows
 - Press bypass at the bottom of the screen
 - You can **Bypass all Faulted**, which will select all zones with faults.
 - Enter your code
 - The zone list will reappear, showing the bypass icon for all affected zones.
 - Arm system as normal

- **Adding User Codes:**
 - Press **Security** on the home screen
 - Press **Tools**, then enter Master Code
 - Select **Users**
 - Existing users are displayed along with the guest and duress code.
 - Four asterisks (****) denotes a code already in each position.
 - Press **Add New**
 - A new user screen will appear
 - Enter name, if desired, by pressing **Name**
 - Press **User Code**
 - Enter new 4-digit user code
 - Press **Save**
 - Press **Back Arrow** when finished.
 - This will take you back to the tools menu.

- **Changing a User Code:**
 - Press **Security**
 - Press **Tools**, then enter master code
 - Select **Users**
 - Press **Edit**
 - Press **User Code**
 - Enter new 4-digit code, press **Save**
 - Press **Back Arrow** button when finished.

- **Deleting a User Code:**
 - Press **Security**
 - Press **Tools**, then enter master code
 - Select **Users**
 - Select a user code to delete
 - Press **Delete**
 - Lyric will want to confirm, Press **Yes**
 - Press **Back Arrow** when finished.